



Need 4 Tapped Holes at 90 deg apart for plate attachment (assembly jig)

Coupling of Scintillator to SiPM

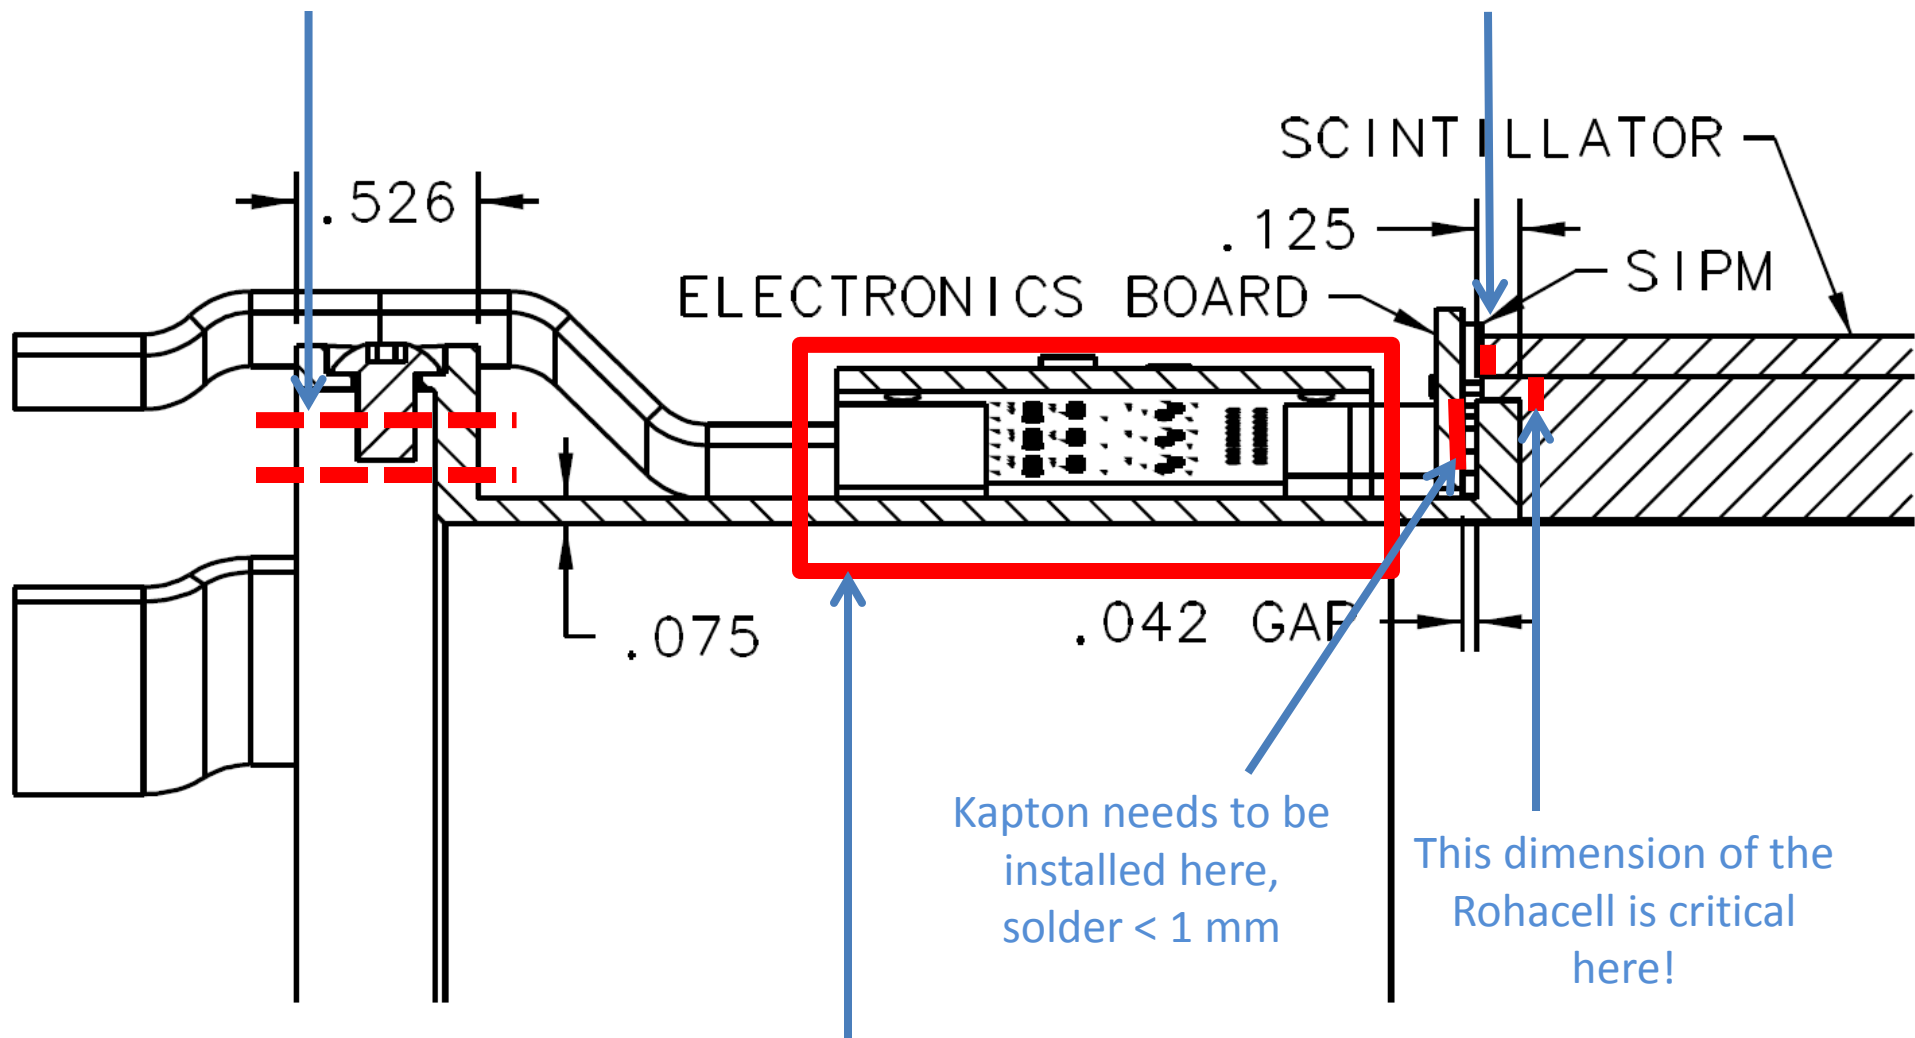

ST2 cannot come into contact with the support hub (Kapton?)

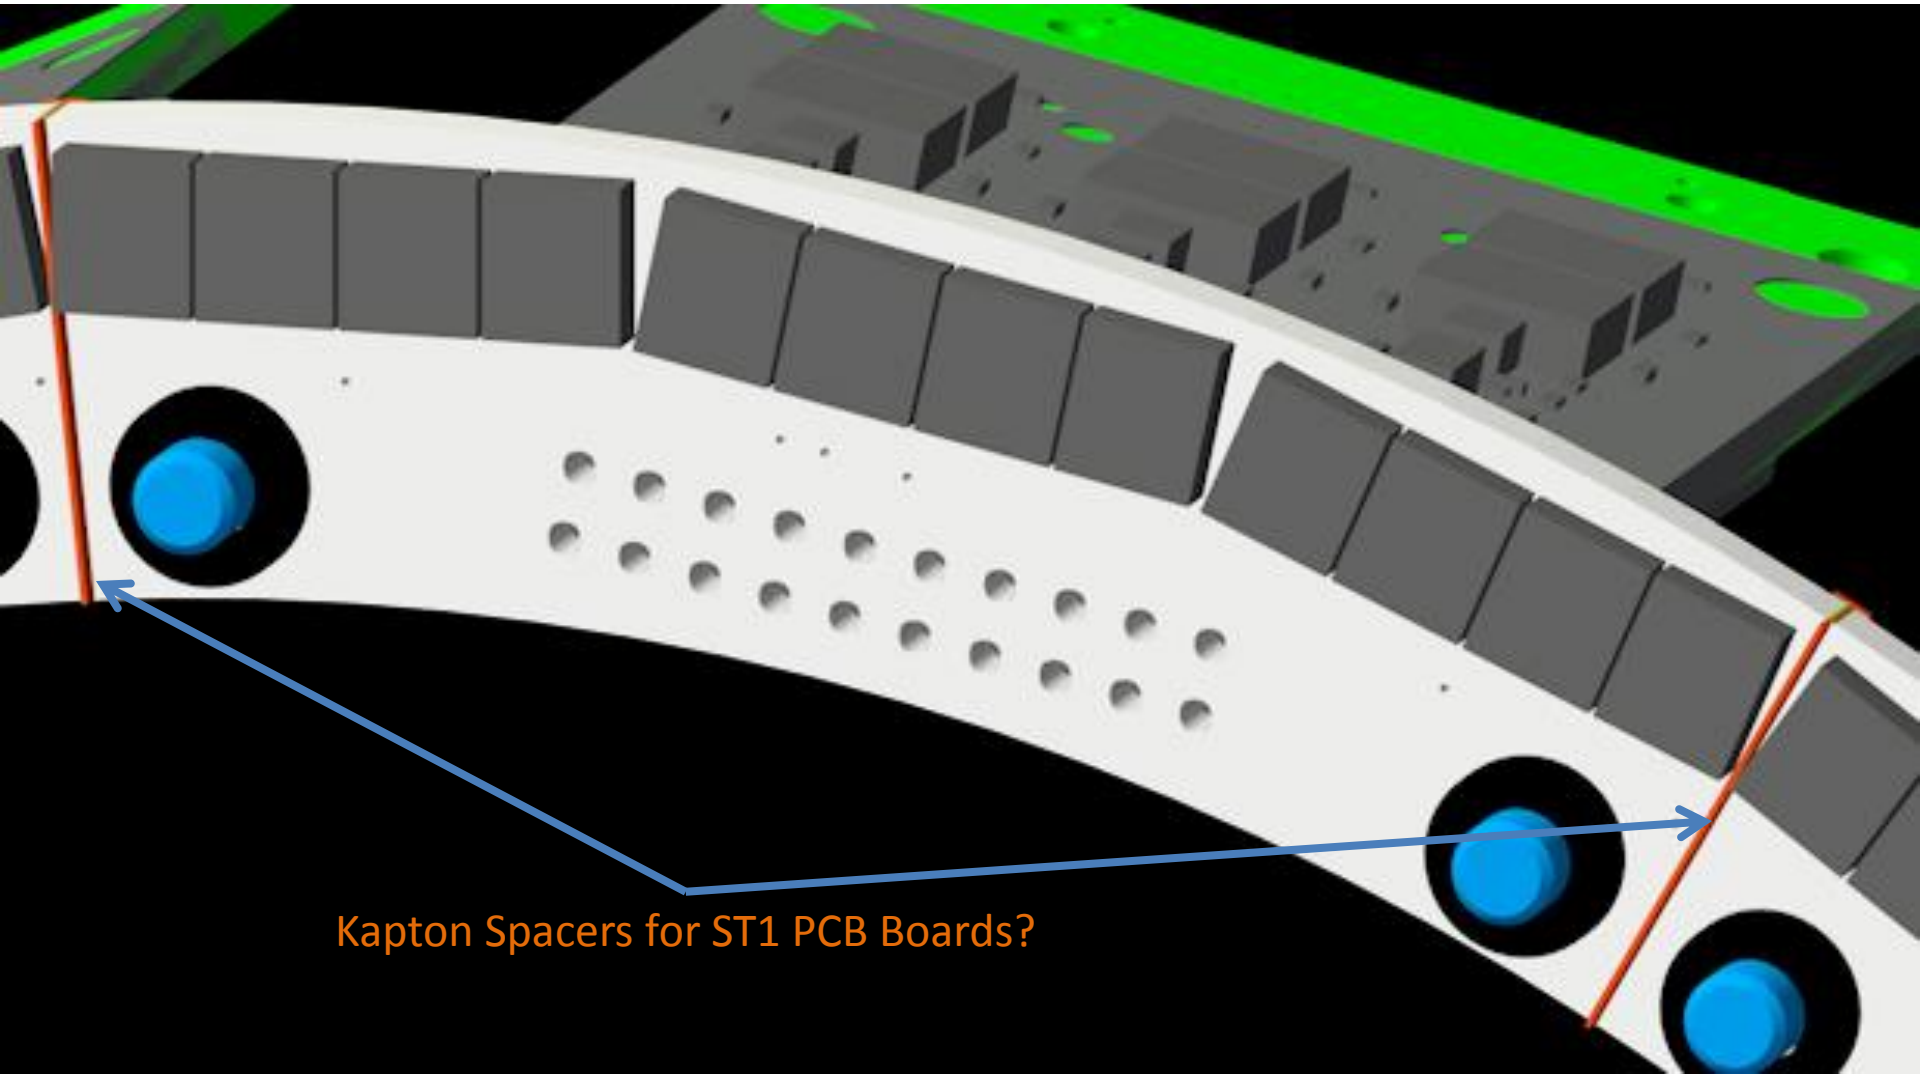

Kapton Spacers for ST1 PCB Boards?